

Assembly Instructions

The Aughton/Broody Coop

The most important thing when assembling the house is that the ground on which the unit is to stand **must be level**. If the ground is not level the unit will not be square and the unit cannot be correctly assembled.

1/ Place floor on level surface and then place one side and the back together.

2/ While holding the back and side together insert 75mm screw provided into the top hole from the outside in the corner where the back and side meet, as shown in Picture 1.

3/ Insert bottom screw in same manner as the top screw as shown

4/ Repeat this procedure with firstly with the other side and finally with the front.


5/ Place the perch hangers to the mark as shown in picture 2 and screw through the pre-drilled holes.

5/ The sides, back and front now need to be screwed to the floor through the pre drilled holes in each of the bottom frames, as shown in Picture 3.

6/ The perch can now be placed in the slots.

7/ Finally place the roof over the unit making sure sits flat on top the unit and then screw the hinges to the roof as shown in picture 4

8/ Your unit should now be fully assembled and give you and your poultry many trouble free years of use.

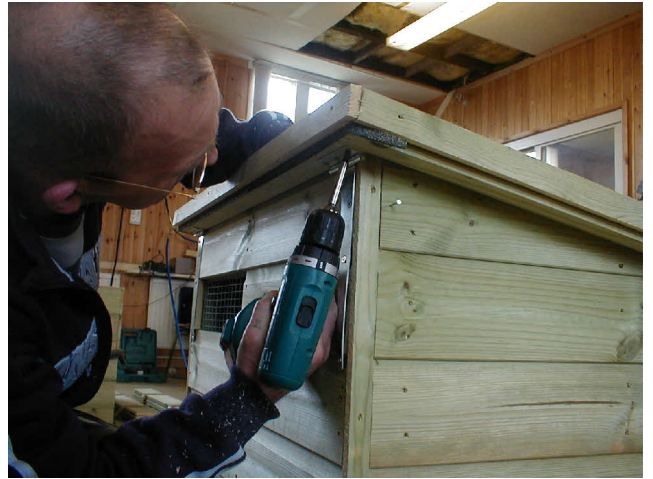

FITTING OF THE RUN BROODY COOP AND AUGHTON



1/ Screw the side panels into the front of the house making sure that the panel is flush with the outside of the house.

Repeat this procedure with the opposite side panel. All holes are pre-drilled.

2/ Butt the end panel up to the two ends of the side panels making sure that all edges are flush. Screw the end panel to the sides through the pre-drilled holes.

3/ Finally place the roof panel on top of the run. The roof panel can now slide backwards and forwards as required.



To attach the front carry handle screw through the predrilled holes into the end panel approx two thirds up from the bottom of the panel on both sides of the panel.

To attach the side handles place handle onto the side panel. First screw the handle into the run spar making sure that the end of the handle is level with edge of the run spar. Then screw the other two screws into the house in the predrilled holes, making sure that the handle is level. Repeat this procedure with the other side handle. Your house and run can now be moved as one unit.

These handles are not fitted to the Broody Coop